Milwaukee®

PACKOUT™

INSTALLATION GUIDE

DRYWALL WOOD STUD CONCRETE

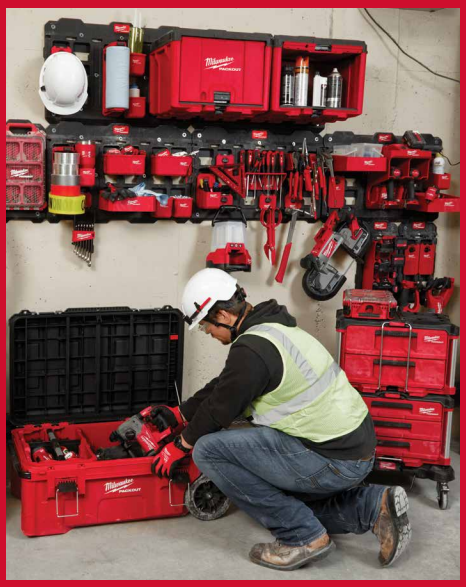

BUILD YOUR SYSTEM

DRYWALL
WALL PLATE INSTALLATION

WATCH INSTALLATION VIDEO

SCAN

or visit https://qr.mke.tl/2w9dv

MATERIALS NEEDED:

- #12 Drywall Anchors with 2" Screws
- 3/32" Drill Bit
- Phillips #2 Driver Bit
- Level
- Stud Finder
- Drill Driver
- Impact Driver
- Safety Glasses
- Gloves

1

Locate & mark studs behind drywall with a pencil.

2

Hold Wall Plate in desired location. Ensure plate is level.

3

If using a Large Wall Plate, mark the 10 identified fastening points with a pencil. If using a Compact Wall Plate, mark the 5 identified fastening points.

4

Follow drywall anchor manufacturer's instructions to install anchors. For any markings that fall on studs pre-drill holes with a 3/32" drill bit.

5

Fasten drywall anchor manufacturer's recommended fasteners into the drywall anchors and #12 x 2" screws into 3/32" pilot holes.

6

Slide additional Wall Plates into place by guiding the new plate's Quick Alignment Tabs on the top, bottom or sides into place on the first Wall Mounted plate.

7

Repeat process to add additional plates and fully customize your shop.

WOOD STUD
WALL PLATE INSTALLATION

WATCH INSTALLATION VIDEO

SCAN

or visit https://qr.mke.tl/23m82

MATERIALS NEEDED:

- 1/4" x 1-1/4" Lag Bolts
- #8 x 2-1/2" Flat Head Wood Screws
- 3/32" Drill Bit
- 7/16" Nut Driver
- Level
- Drill Driver
- Impact Driver
- 1/4" x 2' x 4' Plywood
- Safety Glasses
- Gloves

1

Have a partner hold up plywood backer in desired location and align it so it is in the center of a stud. Ensure plywood is level.

2

Attach plywood to studs with a minimum of 9 wood screws.

3

Hold Wall Plate in desired location. Ensure plate is level.

4

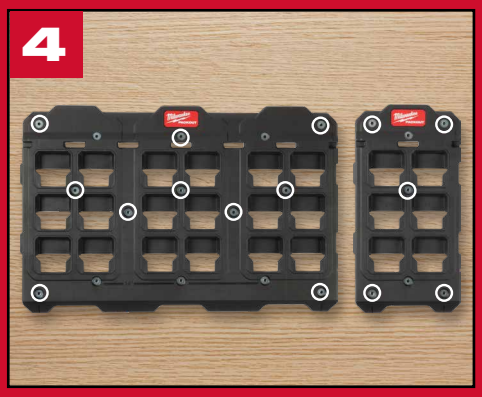

Large Wall Plates require the 10 identified fastening points and Compact Wall Plates require the 5 identified points. Mark these holes with a pencil.

5

Pre-drill all mounting holes with a 3/32" bit.

6

Hold up plate and fasten with 1/4" x 1-1/4" lag bolts.

7

Slide additional Wall Plates into place by guiding the new plate's Quick Adjustment Tabs on the top, bottom, or sides into place on the first Wall Mounted Plate.

8

Repeat process to add additional plates and fully customize your shop.

CONCRETE
WALL PLATE INSTALLATION

WATCH INSTALLATION VIDEO

SCAN

or visit https://qr.mke.tl/26sgs

MATERIALS NEEDED:

- 1/4" x 1-1/4" Concrete Anchors*
- 3/16" Masonry Bit
- 5/16" Nut Driver
- Level
- Hammer Drill
- Impact Driver
- Safety Glasses
- Gloves
- N95 Respirator

1

Hold Wall Plate in desired location. Ensure plate is level.

2

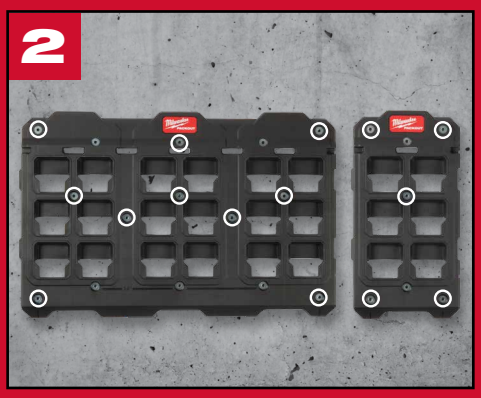

If using a Large Wall Plate, mark the 10 identified fastening points with a pencil. If using a Compact Wall Plate, mark the 5 identified fastening points.

3

Pre-drill holes with 3/16" masonry bit.

4

Using 1/4" x 1-1/4" concrete anchors, fasten the plate to the wall.

5

Slide additional Wall Plates into place by guiding the new plate's Quick Alignment Tabs on the top, bottom or sides into place on the first Wall Mounted Plate.

6

Repeat process to add additional plates and fully customize your shop.

*Certain concrete materials may require longer anchors

BUILD YOUR SYSTEM